

Completely pre-assembled Signal Towers / KOMPAKT 37

K37cl sr plug EM 12VAC/DC GN/RD



c(UL)us

MECHANICAL DATA		
Height	141 mm	
Diameter	38 mm	
Materials	PC	
Dome colour	Clear	
Housing colour	Black	
Protection category	IP65	
Connection	M12 plug 5-pole	
Cable entry	Membrane grommet	
Cable entry minimum	d = 1 mm	
Cable entry maximum	d = 9 mm	
Cable length	150 mm	
Tension relief	Pull-out protection	
Type of fixing	Built-in mounting	
Working temperature minimum	-20°C	
Working temperature maximum	+50°C	
Weight with packaging	117 g	
Product weight	77 g	

ELECTRICAL DATA	
Operating voltage	12V
Operating voltage type	AC/DC
Operating voltage frequency	50Hz
Operating voltage tolerance	+/- 10%
Rated operational voltage	12 VDC
Rated operational current	175 mA
Rated inrush current	500 mA
Protection class	Protection class 2
Pollution degree	3 In the connection area: 2

OPTICAL DATA	
Light source	LED
Light colour	Green Red
Optical signal image	Permanent
Service life optical	50,000 h maximum

APPROVAL DATA	
Conforms with CE	Yes
Conforms with RoHS directive	Yes

For additional installation and mounting information, refer to the appropriate user guide at www.werma.com. This printed copy is for information only and is subject to alteration.



Completely pre-assembled Signal Towers / KOMPAKT 37

K37cl sr plug EM 12VAC/DC GN/RD


WEEE	Yes
Conforms with ATEX-directive	No
Conforms with CCC	No
Conforms with UL	cULus
UL Type Rating	Type 12 Type 4X
Conforms with FCC	No
Conforms with IC	No
EAC certificate available	Yes
Conforms with UKCA (Importer)	Yes (WERMA (UK) Ltd.)
Conforms with AS-I	No
ICAO Certification	No
Conforms with DNV	No
Conforms with RoHS CN	No
Conforms with VdS	No

For additional installation and mounting information, refer to the appropriate user guide at www.werma.com. This printed copy is for information only and is subject to alteration.



Completely pre-assembled Signal Towers / KOMPAKT 37

K37cl sr plug EM 12VAC/DC GN/RD

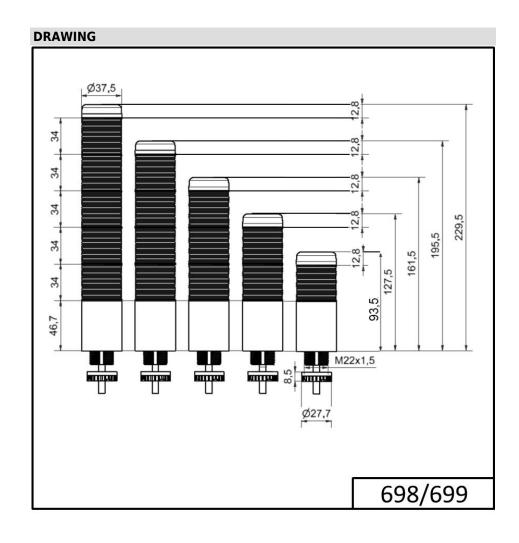

For additional installation and mounting information, refer to the appropriate user guide at www.werma.com. This printed copy is for information only and is subject to alteration.